


## Dynamic White Controller Wiring Instruction

1. Connect RED wire to V+ terminal
2. Connect YELLOW wire to Warm White terminal
3. Connect WHITE wire to Cool White terminal
4. Connect MALE jack of D.C. power supply to FEMALE jack of the Controller
5. Input D.C. Voltage : D.C. 12 Volt or 24 Volt
6. Maximum Wattage : 58 Watt / 12 Volt, 115 Watt / 24 Volt



## Dynamic White Remote Controller Instruction

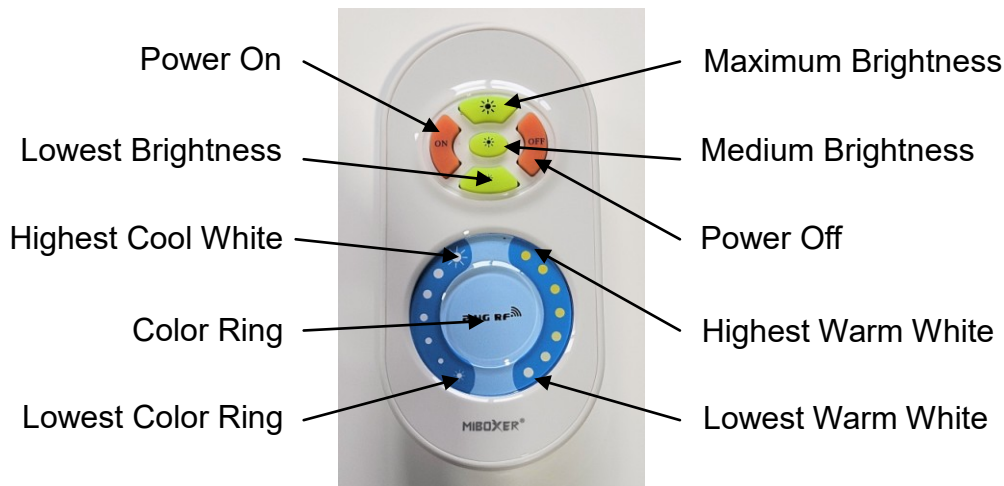

### **How to Use**

1. Brightness Adjusting : Use your finger to touch the left half part of color ring, you can change the brightness from highest to the lowest.
2. Color Temperature Adjusting : Use your finger to touch the right half part of color ring, you can adjust the color temperature from Warm to Cool white.
3. Resume function : The previous setting will be resumed when power on again.
4. Matching code : Press Maximum brightness key once within 3 seconds when power on again, the light will blink 3 times if matching is successful.
5. Clearing code : Press Maximum brightness key five times within 3 seconds when power on again, the light will blink 6 times if clearing is successful.

### **Caution**

Do not touch or press the color ring while loading the batteries to protect the sensitiveness. Please use the remote controller 3 seconds after the batteries are loaded. Please reload the batteries when color ring is not sensitive.